



Model DSC-1000 Kit Instructions


Bulb Kit – P/N DSC0950

Includes:

- 1 – Bulb
- 1 – Bulb Adapter/Bayonet Fitting
- 1 – Adapter Gasket
- 1 – Bulb Cover

Instructions:

1. Remove bulb cover. Do not discard cover, keep and use the bulb cover when storing.
2. Grip the bulb at the top and rotate clockwise to connect the bulb to the housing assembly and counter-clockwise to disconnect the bulb from the housing assembly.

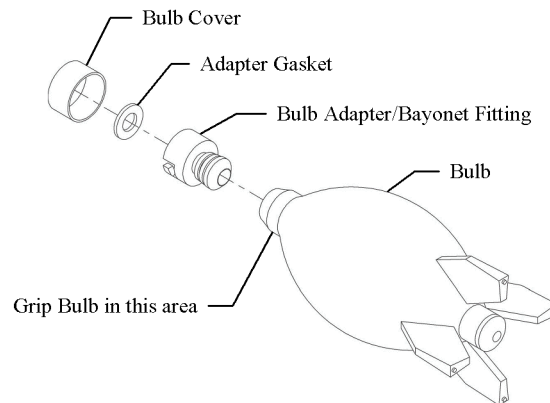

Filter Kit – P/N DSC0940


Includes:

- 1 – Filter Media, 20 micron
- 1 – Filter Screen
- 1 – Filter Gasket

Instructions:

1. Unscrew the four #4-40 x 3/8" screws.
2. Remove filter cover, gasket, media, and screen.
3. Install the new filter components in the following order: filter screen, filter media, then the filter gasket.
4. Replace filter cover and tighten the four #4-40 x 3/8" screws. Screws should be finger tight, over tightening could cause damage.

Note: We recommend that the filter be changed on an annual basis unless the conditions in which the FireFly™ is used requires more frequent changes.

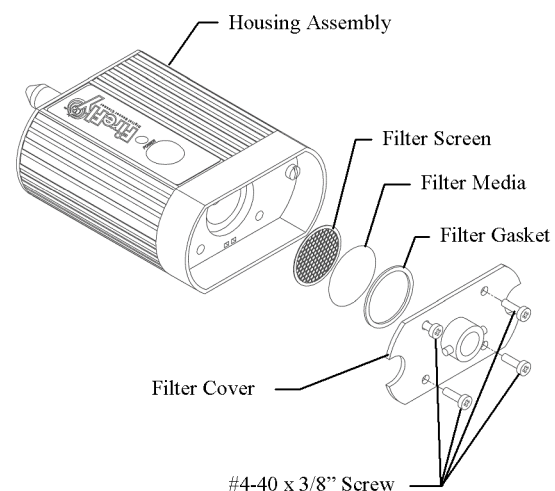



Model DSC-1000 Kit Instructions

Misc. Parts Kit – P/N DSC0930

Includes:

- 1 – Filter Cover
- 1 – Nozzle
- 4 – #4-40 x 3/8" Screw
- 2 – #6-32 x 3/8" Screw

Instructions, Filter Cover:

1. Unscrew the four #4-40 x 3/8" screws.
2. Remove filter cover.
3. Install new filter cover and tighten the four #4-40 x 3/8" screws. Screws should be finger tight, over tightening could cause damage.

Instructions, Nozzle:

1. Align small diameter of the nozzle with the hole in the outlet tube.
2. Press the nozzle into the tube.

Caution: Do Not use a Hammer. Any strong sharp impact could damage the outlet tube of the FireFly™.

